

電装系ケーブルの色とその所在位置

| Connector Name/ Number | Color | Location |
|--------------------------------------|-------|---|
| A/C Compressor Clutch | BK | Lower front of Engine |
| A/C Heater Control | BK | Center of Instrument Panel |
| A/C Low Pressure Switch | BK | Right Rear of Engine Compartment |
| A/C Pressure Transducer | BK | Lower Front of Engine |
| Ambient Temperature Sensor | BK | Left Front Wheel Housing |
| Back-up Lamp Switch | GY | Front of Engine Compartment on Manual Transmission |
| Blower Motor | BK | Right Rear of Instrument Panel |
| Blower Motor Resistor Block | BK | Right Side of Cowl Panel |
| Brake Lamp Switch | GY | Left Side of Brake Panel |
| Brake Shift Interlock Solenoid | WT | Below Steering Column |
| Brake Warning Indicator Switch | BK | Front Left Side of Engine Compartment |
| Camshaft Position Sensor | BK | On Engine Left Side of Engine Compartment |
| Cargo Lamp | BK | Cargo Area |
| Center High Mounted Stoop Lamp | BK | Top of Liftgate |
| Cigar Lighter | BK | Bottom Center of Instrument Panel |
| Clutch Pedal Position Switch | BK | Left Side of Steering Column |
| Controller Anti-Lock Brake | BK | Left Side engine Compartment |
| Crankshaft Position Sensor | BK | Lower Right Side Of Engine |
| Dome Lamp | BK | Center of Headliner |
| Driver Airbag | YL | Front of Steering Wheel |
| Driver Door Lock Switch | BK | Driver Door |

| | | |
|--------------------------------------|------|---|
| Driver Seat Belt Switch | BK | Lower Left B-Pillar |
| EGR Solenoid | BK | Right Rear of Engine |
| Generator | BK | Lower Right Side of Engine |
| High Note Horn | BK | Left Inner Fender |
| Hood Ajar Switch | BK | Left Rear Engine Compartment |
| Idle Air Control Motor | BK | Top of Engine |
| Ignition Coil | BK | Right Rear of Engine |
| Ignition Switch | BK | Right Side of Steering Column |
| Inlet Air Temperature Sensor | BK | Left Side Engine Compartment on Engine |
| Input Speed Sensor | GY | Front of Engine Compartment on Transmission |
| Instrument Cluster C1 | BK | Driver's Side of Instrument Panel |
| Knock Sensor | BL | Front of Engine Compartment on Engine |
| Leak Detection Pump | BK | Near Fuel Tank Module |
| Left Back-up Lamp | BK | Left Side of Rear Fascia |
| Left Fog Lamp | BK | Lower Left Front Fascia |
| Left Front Door Ajar Switch | BK | Left B-Pillar |
| Left Front Door Speaker | BK | Left Door |
| Left Front Park/ Turn Signal Lamp | BK | Left Front of Vehicle |
| Left Front Side Marker Lamp | BK | Left Front Wheel Opening |
| Left Front Wheel Speed Sensor | BK | Left Front Wheel Opening |
| Left High Beam Headlamp | BK | At Headlamp Assembly |
| Left Instrument Panel Speaker | BK | Left Upper Instrument Panel |
| Left Rear Door Lock Motor | BK | Rear of left Rear Door |
| Left Rear Speaker | BK | Left C-Pillar |
| Left Rear Turn Signal Lamp | GY | In Rear Lamp Assembly |
| Left Rear Wheel Speed Sensor | BL | Left Rear Wheel Opening |
| Left Tail/ Stop Lamp | GY | In Rear Lamp Assembly |
| Left Visor/ Vanity Lamp | BK | Left Front Side of Headliner |
| License Lamp | NAT | Center of Rear Fascia |
| Liftgate Cylinder Lock Switch | LTGY | Inside Liftgate |
| Liftgate Lock Motor | BK | Left Liftgate |
| Low Note Horn | BK | Left Inner Fender |
| Manifold Absolute | BK | Top Rear of |

| | | |
|-------------------------------------|----|------------------------------------|
| Pressure Sensor | | Engine |
| Map/ Reading Lamps | BK | Front Headliner |
| Multi-Reading Switch | GY | Steering Column |
| Occupant Restraint Controller | YL | Forward of Front Console |
| | | |
| Overhead Console Module | BK | Front Center of Headliner |
| Oxygen Sensor 1/ 1 Upstream | GY | Left Side Engine Compartment |
| Passenger Airbag | YL | Passenger Side of Instrument Panel |
| Passenger Door Cylinder Lock Switch | BK | Passenger Door |
| Passenger Door Lock Motor | BK | Passenger Door |
| Passenger Door Lock switch | BK | Passenger Door |
| Passenger Seat Airbag | | On Passenger Seat |
| Passenger Seat Belt Switch | | Lower Right B-Pillar |
| Power Distribution Center | | Left side of Engine Compartment |
| Power Mirror Switch | | Left Side of Instrument Panel |
| Power outlet | RD | Top of Front Console |
| Power seat motor | | Inside Driver Seat |
| Power seat switch | | On Driver Seat |
| Power Steering Pressure Switch | GY | Left Rear Engine Compartment |
| Power Sunroof Module | | Right Side of Sunroof |
| Powertrain Control Module C1 | BK | Left Side Engine Compartment |
| PowerTrain Control Module C2 | BK | Left Side Engine Compartment |
| Radiator Fan Motor | BK | Front Center Engine Compartment |
| Radio C1 | BK | Center of Instrument Panel |
| Radio C2 | GY | Center of Instrument Panel |
| Radio C3 | | Center Instrument Panel |
| Rear Power Outlet | | Right Rear Cargo Area |
| Rear Power Window Switch | | Rear of Front center Console |
| Rear Window Defogger Switch | BK | Lower Center Instrument panel |
| Rear wiper Motor | | Center of Lftgate |
| Rear wiper Switch | | Lower Center Instrument Panel |
| Remote Keyless Entry module | BK | Upper Center Instrument Panel |
| Right Back-up Lamp | GY | Right Side of Rear Fascia |
| Right Fog Lamp | | Lower Right Front Fascia |

| | | |
|---|-----|---|
| | | |
| Right Front Ajar Switch | | Right B-Pillar |
| Right Front Door Speaker | BK | Right Door |
| Right Front Park/Turn Signal Lamp | | Right Front of Vehicle |
| Right Front Power Window Motor | | Right Front Door |
| Right Front Seat Airbag | BK | Right Front Seat |
| Right front Side Marker Lamp | NAT | Right Front Wheel Opening |
| Right Front Wheel Speed Sensor | BK | Right Front Wheel Opening |
| Right High Beam Headlamp | BK | Right Front Headlamp Assembly |
| Right Instrument Panel Speaker | BK | Right Upper Instrument Panel |
| Right Low Beam Headlamp | BK | Right Front Headlamp Assembly |
| Right Power Mirror | NAT | Right Front Door |
| Right rear door ajar Switch | | Right C-pillar |
| Right rear Door Lock Motor | BK | Right Rear Door |
| Right rear Power Window Motor | | Right Rear door |
| Right Rear Speaker | BK | Right side Shelf Panel |
| Right Rear Turn Signal Lamp | GY | In rear lamp Assembly |
| Right rear Wheel Speed Sensor | BL | Right Rear Wheel Opening |
| Right Seat Airbag | YL | Right Seat |
| Right Seat Belt Tensioner | | Right B-Pillar |
| Right side Impact Airbag Control Module | BK | Lower Right B-Pillar |
| Right Tail/Stop Lamp | | In Rear Lamp assembly |
| Right Turn Signal Indicator | | Right Side of Instrument Panel |
| Right Visor/Vanity Lamp | BK | Right Front Headliner |
| Sentry Key immobilizer Module | BK | Right of Steering Column |
| Speed Control servo | BK | Right rear Corner of Engine Compartment |
| Sunroof Control Module | | Right Side of Sunroof assembly |
| Sunroof Switch | BK | Part of Overhead Console |
| Throttle Position Sensor | BK | On Throttle Body |
| Traction Control Switch | WT | Lower Center of Instrument Panel |
| Transmission Control Module | BK | Left Front of Engine Compartment |
| Transmission Range Indicator | BK | Left Side of Transmission Selection Lever |

| | | |
|--|------|---|
| | | |
| Transmission range Sensor | DKGY | Front Engine Compartment on Transmission |
| Transmission solenoid/Pressure Switch Assembly | BK | Front of Engine Compartment on Transmission |
| Vehicle Speed Control switch | | At Steering Wheel |
| Vehicle Speed Sensor | BK | Front of Engine Compartment on Transmission |
| Wiper/Washer Switch | GY | Part of Multifunction Switch |