

電装系ケーブルの色とその所在位置

Connector Name/ Number	Color	Location
A/C Compressor Clutch	BK	Lower front of Engine
A/C Heater Control	BK	Center of Instrument Panel
A/C Low Pressure Switch	BK	Right Rear of Engine Compartment
A/C Pressure Transducer	BK	Lower Front of Engine
Ambient Temperature Sensor	BK	Left Front Wheel Housing
Back-up Lamp Switch	GY	Front of Engine Compartment on Manual Transmission
Blower Motor	BK	Right Rear of Instrument Panel
Blower Motor Resistor Block	BK	Right Side of Cowl Panel
Brake Lamp Switch	GY	Left Side of Brake Panel
Brake Shift Interlock Solenoid	WT	Below Steering Column
Brake Warning Indicator Switch	BK	Front Left Side of Engine Compartment
Camshaft Position Sensor	BK	On Engine Left Side of Engine Compartment
Cargo Lamp	BK	Cargo Area
Center High Mounted Stoop Lamp	BK	Top of Liftgate
Cigar Lighter	BK	Bottom Center of Instrument Panel
Clutch Pedal Position Switch	BK	Left Side of Steering Column
Controller Anti-Lock Brake	BK	Left Side engine Compartment
Crankshaft Position Sensor	BK	Lower Right Side Of Engine
Dome Lamp	BK	Center of Headliner
Driver Airbag	YL	Front of Steering Wheel
Driver Door Lock Switch	BK	Driver Door

Driver Seat Belt Switch	BK	Lower Left B-Pillar
EGR Solenoid	BK	Right Rear of Engine
Generator	BK	Lower Right Side of Engine
High Note Horn	BK	Left Inner Fender
Hood Ajar Switch	BK	Left Rear Engine Compartment
Idle Air Control Motor	BK	Top of Engine
Ignition Coil	BK	Right Rear of Engine
Ignition Switch	BK	Right Side of Steering Column
Inlet Air Temperature Sensor	BK	Left Side Engine Compartment on Engine
Input Speed Sensor	GY	Front of Engine Compartment on Transmission
Instrument Cluster C1	BK	Driver's Side of Instrument Panel
Knock Sensor	BL	Front of Engine Compartment on Engine
Leak Detection Pump	BK	Near Fuel Tank Module
Left Back-up Lamp	BK	Left Side of Rear Fascia
Left Fog Lamp	BK	Lower Left Front Fascia
Left Front Door Ajar Switch	BK	Left B-Pillar
Left Front Door Speaker	BK	Left Door
Left Front Park/ Turn Signal Lamp	BK	Left Front of Vehicle
Left Front Side Marker Lamp	BK	Left Front Wheel Opening
Left Front Wheel Speed Sensor	BK	Left Front Wheel Opening
Left High Beam Headlamp	BK	At Headlamp Assembly
Left Instrument Panel Speaker	BK	Left Upper Instrument Panel
Left Rear Door Lock Motor	BK	Rear of left Rear Door
Left Rear Speaker	BK	Left C-Pillar
Left Rear Turn Signal Lamp	GY	In Rear Lamp Assembly
Left Rear Wheel Speed Sensor	BL	Left Rear Wheel Opening
Left Tail/ Stop Lamp	GY	In Rear Lamp Assembly
Left Visor/ Vanity Lamp	BK	Left Front Side of Headliner
License Lamp	NAT	Center of Rear Fascia
Liftgate Cylinder Lock Switch	LTGY	Inside Liftgate
Liftgate Lock Motor	BK	Left Liftgate
Low Note Horn	BK	Left Inner Fender
Manifold Absolute	BK	Top Rear of

Pressure Sensor		Engine
Map/ Reading Lamps	BK	Front Headliner
Multi-Reading Switch	GY	Steering Column
Occupant Restraint Controller	YL	Forward of Front Console
Overhead Console Module	BK	Front Center of Headliner
Oxygen Sensor 1/ 1 Upstream	GY	Left Side Engine Compartment
Passenger Airbag	YL	Passenger Side of Instrument Panel
Passenger Door Cylinder Lock Switch	BK	Passenger Door
Passenger Door Lock Motor	BK	Passenger Door
Passenger Door Lock switch	BK	Passenger Door
Passenger Seat Airbag		On Passenger Seat
Passenger Seat Belt Switch		Lower Right B-Pillar
Power Distribution Center		Left side of Engine Compartment
Power Mirror Switch		Left Side of Instrument Panel
Power outlet	RD	Top of Front Console
Power seat motor		Inside Driver Seat
Power seat switch		On Driver Seat
Power Steering Pressure Switch	GY	Left Rear Engine Compartment
Power Sunroof Module		Right Side of Sunroof
Powertrain Control Module C1	BK	Left Side Engine Compartment
PowerTrain Control Module C2	BK	Left Side Engine Compartment
Radiator Fan Motor	BK	Front Center Engine Compartment
Radio C1	BK	Center of Instrument Panel
Radio C2	GY	Center of Instrument Panel
Radio C3		Center Instrument Panel
Rear Power Outlet		Right Rear Cargo Area
Rear Power Window Switch		Rear of Front center Console
Rear Window Defogger Switch	BK	Lower Center Instrument panel
Rear wiper Motor		Center of Lftgate
Rear wiper Switch		Lower Center Instrument Panel
Remote Keyless Entry module	BK	Upper Center Instrument Panel
Right Back-up Lamp	GY	Right Side of Rear Fascia
Right Fog Lamp		Lower Right Front Fascia

Right Front Ajar Switch		Right B-Pillar
Right Front Door Speaker	BK	Right Door
Right Front Park/Turn Signal Lamp		Right Front of Vehicle
Right Front Power Window Motor		Right Front Door
Right Front Seat Airbag	BK	Right Front Seat
Right front Side Marker Lamp	NAT	Right Front Wheel Opening
Right Front Wheel Speed Sensor	BK	Right Front Wheel Opening
Right High Beam Headlamp	BK	Right Front Headlamp Assembly
Right Instrument Panel Speaker	BK	Right Upper Instrument Panel
Right Low Beam Headlamp	BK	Right Front Headlamp Assembly
Right Power Mirror	NAT	Right Front Door
Right rear door ajar Switch		Right C-pillar
Right rear Door Lock Motor	BK	Right Rear Door
Right rear Power Window Motor		Right Rear door
Right Rear Speaker	BK	Right side Shelf Panel
Right Rear Turn Signal Lamp	GY	In rear lamp Assembly
Right rear Wheel Speed Sensor	BL	Right Rear Wheel Opening
Right Seat Airbag	YL	Right Seat
Right Seat Belt Tensioner		Right B-Pillar
Right side Impact Airbag Control Module	BK	Lower Right B-Pillar
Right Tail/Stop Lamp		In Rear Lamp assembly
Right Turn Signal Indicator		Right Side of Instrument Panel
Right Visor/Vanity Lamp	BK	Right Front Headliner
Sentry Key immobilizer Module	BK	Right of Steering Column
Speed Control servo	BK	Right rear Corner of Engine Compartment
Sunroof Control Module		Right Side of Sunroof assembly
Sunroof Switch	BK	Part of Overhead Console
Throttle Position Sensor	BK	On Throttle Body
Traction Control Switch	WT	Lower Center of Instrument Panel
Transmission Control Module	BK	Left Front of Engine Compartment
Transmission Range Indicator	BK	Left Side of Transmission Selection Lever

Transmission range Sensor	DKGY	Front Engine Compartment on Transmission
Transmission solenoid/Pressure Switch Assembly	BK	Front of Engine Compartment on Transmission
Vehicle Speed Control switch		At Steering Wheel
Vehicle Speed Sensor	BK	Front of Engine Compartment on Transmission
Wiper/Washer Switch	GY	Part of Multifunction Switch