

To Align	Service Checking	Service Setting
Caster	+3.5 +/-1.0	+3.5 +/-0.50
Camber	0.0 +/-0.80	0.0 +/-0.50
Toe-in	+0.15 +/-0.10	+0.15 +/-0.05